


User Guide

CD/MP3-USB Player with Pitch Control

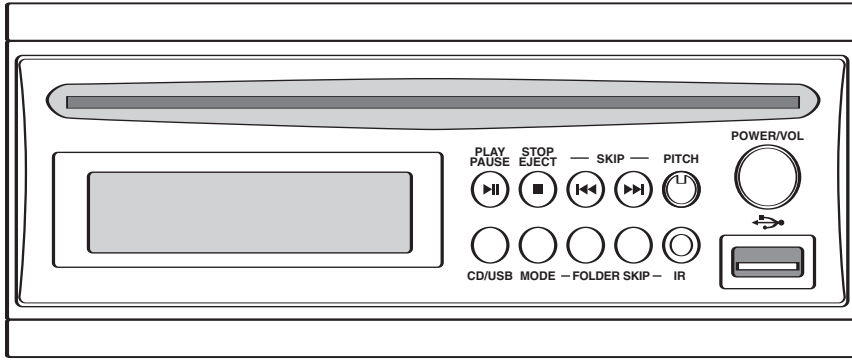

Operating the CD Player

1. Turn the sound system's main power "on."
2. Push the **POWER/VOL** button on the CD player to activate it (the LCD panel will light).
3. Gently push a CD into slot until auto-load mechanism responds

Note: Do not force CD into player, as damage may result.

!! Caution: This player does not accept 8-cm diameter CD's.

CD Playback

1. Press the **PLAY/PAUSE** button .
 2. Adjust the volume control knob on the CD player.
 - To pause, press the **PLAY/PAUSE** button; press again to resume play.
 - To skip forward during play or program mode press **SKIP** , or press **SKIP** to skip back to the previous song.
- If song is playing, press and hold **SKIP** buttons for fast cue (search).
- While CD is playing, press the **STOP/EJECT** button once to stop playback, and press **STOP/EJECT** again to eject the CD.

MP3 Playback (MP3 songs recorded to CD)

- To start play from a folder, press the **FOLDER SKIP** buttons until the folder you want appears. During playback, use the **FOLDER SKIP UP** and **FOLDER SKIP DOWN** buttons to move to other folders.
- Press the **PLAY/PAUSE** button to play the first song of the folder.

USB Playback (MP3 songs recorded to USB key)

1. Insert a USB memory key into the unit. *Note: This is not an iPod port!*
 2. Press the **CD/USB** button .
- To start play from a folder, press the **FOLDER SKIP** buttons until the folder you want appears. During playback, use the **FOLDER SKIP UP** and **FOLDER SKIP DOWN** buttons to move to other folders.
 - Press the **PLAY/PAUSE** button to play the first song of the album/folder.
- !! Note:** Be sure to turn the CD/MP3 player off before removing the USB key.

Play Mode (note: accessible only by play MODE BUTTON on remote control)

Press **PLAY MODE** key one or more times to select one of the following modes: Play All Random, Repeat Track, Repeat Folder (MP3 mode only) Repeat All, Random Repeat and Play All.

Program Play (note: programming feature requires the remote control)

To program songs/tracks on CD

1. Insert CD. Press **PROG** key on remote control to enter program mode.
2. Enter desired song using keys 0 - 9, followed by the **PROG** key. Repeat until all songs are programmed (display will return to normal after approximately 10 seconds).
3. To play programmed songs, press **PROG** followed by **PLAY**. (note: to play songs in normal sequence, press **PLAY** only.)
4. To clear programmed songs, press **PROG** followed by **STOP**.

To program MP3 songs/tracks recorded to CD or USB key

1. Insert CD with MP3 songs or USB key with MP3 songs.
2. Press **PROG** key on remote and enter desired folder using keys 0 - 9, press **PROG** again and enter desired track. Repeat until all songs are programmed, press **PROG** key when complete (display will return to normal after approximately 10 seconds).
3. To play programmed songs, press **PROG** followed by **PLAY**.
(note: to play songs in normal sequence, press **PLAY** only.)
4. To clear programmed songs, press **PROG** followed by **STOP**.
5. To view folder description, press **DISPLAY** key on remote.

Pitch Control

For normal speed, turn the **PITCH** knob to detent (12:00) position. To slow down speed of playback, turn knob to left; to speed up, turn knob to right.

FIND button (on remote control, for use with MP3 only)

Press **FIND** once:

- a. Alpha-numeric search key appears in the CD player's lower display line followed by the first track found (if any) whose first character in the title matches the key.
- b. Press **UP/CUE** or **DOWN/REV** to change the search key.
- c. Press **PLAY/PAUSE** to play the displayed track. If more than one track begins with the same key they will play in sequence before play returns to normal.
- d. While playing track, use **UP/CUE** and **DOWN/REV** to navigate through tracks.

Press **FIND** twice:

- a. First folder (album) is displayed.
- b. Use **UP/CUE** and **DOWN/REV** to navigate through folders (albums).
- c. Press **PLAY/PAUSE** to play tracks within selected folder.

Press and hold the **FIND** button for 1 second to remove (or add) ID3 TAG in upper display line.

ESP button (Electronic Shock Protection) (on remote control)

On CD playback only and with track playing, the **ESP** button turns Electronic Shock Protection off/on. Default at player turn-on is **ESP** on.

*note: Always leave **ESP** set to "on".

Warranty

Your CD/MP3 player with pitch control is warranted for 1 year from date of purchase against material and manufacturing defects. Normal wear and tear, shipping damage, and abuse of any kind is not covered under warranty. All warranty service not authorized or performed by Group X Audio voids this warranty. Please contact Group X Audio for any service questions or warranty issues.

GROUP X AUDIO

Group X Audio
303 Potrero Street, Suite 45-105 Santa Cruz, CA 95060
831 458-1800 www.groupxaudio.com

GXA 04/09