

AEROLINK

AL 3.0



Operating Manual

*fitness*audio AL 3.0 Aerolink Bluetooth® Receiver

Thank you for purchasing the Aerolink by Fitness Audio. This product is easy to install by anyone one who is familiar with setting up sound systems. It is now available in 1 of 4 separate IDs: Aerolink1, Aerolink2, Aerolink3 and Aerolink4. They can be identified in 3 ways - 1) A Blue Dot on the Silver Label on the side of the carton is the first indication of the id number; 2) you will see a black number in a white circle on the right hand side of the front panel once you have unpacked the unit; and 3) the Bluetooth Device signature for the product when you pair it with your smartphone, pc or tablet. The 4 separate id versions can all be used under the same roof in adjacent rooms without any conflict in pairing - you will be pairing with the one who's number is shown on the front panel you are looking at.

1. Powering It Up.

The Aerolink can be powered from any 12V500mA already in use in the audio system like those that power the Wireless Mic Receiver using the DC "Y" Cable supplied. Alternatively, if you purchased the unit with an optional 12V DC Power Supply then please plug that into a GPO and DC connector into the Power In socket (1).

2. Connecting to a Mixer.



Connect using either the Stereo (TRS) Line Out Jack (3) or the 2 RCA sockets(2) to your mixer's matching Line Input sockets. A standard 2RCA to 2RCA Cable is provided.

3. Turn it on and linking up.

When you turn it on, the blue Power-on light in the switch illuminates and the 2 blue LEDs will start flashing once you have pushed the Blue LINK button (6). The first, "SCAN" LED(4) is searching for a smartphone or player to pair with, so, open your smartphone, go to Settings, select Bluetooth, turn Bluetooth on and watch it search for devices. After a few seconds the words Aerolink1 will appear and Not Connected will soon change to Connected and the SCAN LED will stop flashing. The second, "LOCK LED"(5) will continue to flash confirming the link is good. Go to your music file on the device and select the Playlist you want to use and press Play. If the sound system is turned on and the Aerolink has been selected then you will hear the music so set the volume and you are all done. Please note that the Volume Control (7) on the front Panel of the Aerolink is a "Turn Down" Attenuator so should always be on MAX unless a better cleaner sound with the Mixer or Amp input you are using is achieved with it set at the 12 o'clock position.

4. Re-setting the Link

Once you take the linked device out of the range of the receiver (around 8 meters or 25 feet) you will need to re-scan and connect again. Press the Blue Button to break a link and to start a new linking process again.

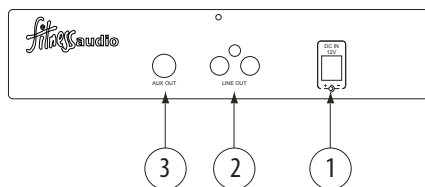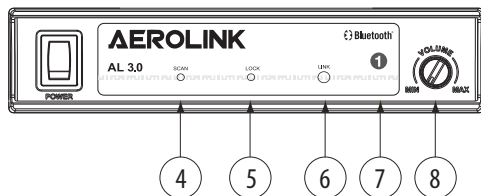

Key To Illustration:

- | | |
|----------------------------|-------------------|
| 1. DC Input | 5. LOCK LED |
| 2. RCA Outputs | 6. LINK button |
| 3. 1/4" Stereo Jack Output | 7. ID Number |
| 4. SCAN LED | 8. Volume Control |

Fitness Audio products are distributed worldwide by Fitness Audio Network. They are manufactured to our specifications. Your Fitness Audio Aerolink is covered against manufacturing defects by a 12 month warranty commencing at the date of purchase.

Distributed in Europe by Knud Danielsen A/S Denmark www.fitnessaudio.dk and in the USA by Fitness Audio, LLC Santa Cruz, Ca. www.fitaud.com

Your comments are welcome. Email to: info@fitnessaudio.net.au

Warranty information for service claims.

(Please retain for your records.)

This product was purchased by:

(Business Name)


on (date) .. / .. / .. from (Supplier)

of (address)

Serial Number.....

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

WARNING		
		
		
Do not remove lids No user serviceable parts inside Do not place liquid containers on unit Do not expose to moisture or rain		



Fitness Audio Network P/L
PO Box 321
Alexandria
NSW 1435
AUSTRALIA
www.fitnessaudio.net.au

Distributed in Europe by
Knud Danielsen A/S
Espergaerde, Denmark
www.fitnessaudio.dk

and in the USA by
Fitness Audio LLC
Santa Cruz, Ca.
www.fitaud.com